


Crane scale KERN HFM







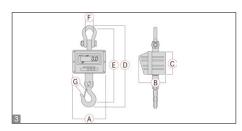

Robust industrial crane scale with bright LED display for optimum reading in unfavourable ambient conditions

Features

- With the TÜV certification mark, the scales meet the requirements of the standard EN 13155 (Non-fixed load lifting attachments/ Breakage resistance) and EN 61010-1 (Electrical safety)
- Professional device for robust applications in production, quality control, logistics etc. Because of its stable construction and robust design, it is ideal for continuous use in industrial environment
- High mobility: thanks to rechargeable battery operation, compact, lightweight construction, it is suitable for the use in several locations (production, warehouse, dispatch department etc.)

- Adaptation to unstable environmental conditions by changing the readability
- Hold function: When the weighing value remains unchanged the weight indicated on the display is automatically "frozen" until the Hold key is pressed
- Tare: Resets the display to "0" when there is a load on the scale. Now removed or added loads are directly displayed
- · Hook with safety catch, revolving
- 2 Radio remote control standard. Range up to 20 m. All functions can be selected (excl. ON/OFF). W×D×H 48×10×95 mm. Batteries included, 2×1.5 V AAA

Technical data

- Superior display size: digit height 30 mm, bright with high contrast for easy reading of weighing results, even in poor lighting conditions
- Internal rechargeable battery pack, operating time up to 50 h without backlight, charging time approx. 14 h
- Precision: 0,2 % of [Max]
- Permissible ambient temperature 0 °C/40 °C

963-133H

STANDARD LALEXT ACCU MULTI DMS 1 DAY 2 DAYS

10000

1000

HFM 10T1



		half .										
Model	Weighing	Readability	Net weight	3 Dimensions								
	capacity									DAkkS Calibr. Certificate		
	[Max]	[d]	approx.	Α	В	С	D	Е	F	G	DAkkS	
KERN	kg	g	kg	mm	mm	mm	mm	mm	mm	mm	KERN	
HFM 1T0.1	1000	100	14	270	200	175	610	540	68	40	963-130H	
HFM 3T0.5	3000	500	16	270	200	175	610	540	74	40	963-132H	
HFM 5T0.5	5000	500	24	300	230	190	730	650	74	55	963-132H	

190

840

230

300



Pictograms



Internal adjusting:

Quick setting up of the balance's accuracy with internal adjusting weight (motordriven)



Adjusting program CAL:

For quick setting up of the balance's accuracy. External adjusting weight required



Easy Touch:

Suitable for the connection, data transmission and control through PC, tablet or smartphone.



Memory:

Balance memory capacity, e.g. for article data, weighing data, tare weights, PLU etc.



Alibi memory:

Secure, electronic archiving of weighing results, complying with the 2014/31/EU standard



Data interface RS-232:

To connect the balance to a printer, PC or network



RS-485 data interface:

To connect the balance to a printer, PC or other peripherals. Suitable for data transfer over large distances. Network in bus topology is possible



USB data interface:

To connect the balance to a printer, PC or other peripherals



Bluetooth* data interface:

To transfer data from the balance to a printer, PC or other peripherals



WiFi data interface:

To transfer data from the balance to a printer, PC or other peripherals



Control outputs (optocoupler, digital I/O):

To connect relays, signal lamps, valves, etc.



Analogue interface:

to connect a suitable peripheral device for analogue processing of the measurements



Interface for second balance:

For direct connection of a second balance



Network interface:

For connecting the scale to an Ethernet network



KERN Communication Protocol (KCP):

It is a standardized interface command set for KERN balances and other instruments, which allows retrieving and controlling all relevant parameters and functions of the device. KERN devices featuring KCP are thus easily integrated with computers, industrial controllers and other digital systems



GLP/ISO log:

The balance displays serial number, user ID, weight, date and time, regardless of a printer connection



GLP/ISO log:

With weight, date and time. Only with KERN printers



Piece counting:

Reference quantities selectable. Display can be switched from piece to weight



Recipe level A:

The weights of the recipe ingredients can be added together and the total weight of the recipe can be printed out



Recipe level B:

Internal memory for complete recipes with name and target value of the recipe ingredients. User guidance through display



Totalising level A:

The weights of similar items can be added together and the total can be printed out



Percentage determination:

Determining the deviation in % from the target value (100 %)



Weighing units:

Can be switched to e.g. nonmetric units at the touch of a key. See balance model. Please refer to KERN's website for more details



Weighing with tolerance range:

(Checkweighing) Upper and lower limiting can be programmed individually, e.g. for sorting and dosing. The process is supported by an audible or visual signal, see the relevant model



Hold function:

(Animal weighing program) When the weighing conditions are unstable, a stable weight is calculated as an average value



Protection against dust and water splashes IPxx:

The type of protection is shown in the pictogram



Suspended weighing:

Load support with hook on the underside of the balance



Battery operation:

Ready for battery operation. The battery type is specified for each device



Rechargeable battery pack:

Rechargeable set



Universal mains adapter:

with universal input and optional input socket adapters for A) EU, CH, GB; B) EU, CH, GB, USA; C) EU, CH, GB, USA, AUS



Mains adapter:

230V/50Hz in standard version for EU, CH. On request GB, USA or AUS version available



Power supply:

Integrated in balance. 230V/50Hz standard EU. More standards e.g. GB, USA or AUS on request



Weighing principle: Strain gauges:

Electrical resistor on an elastic deforming body



Weighing principle: Tuning fork:

A resonating body is electromagnetically excited, causing it to oscillate



Weighing principle: Electromagnetic force compensation:

Coil inside a permanent magnet. For the most accurate weighings



Weighing principle: Single cell technology: Advanced version of the force compensation

principle with the highest level of precision



Verification possible:

The time required for verification is specified in the pictogram



DAkkS calibration possible (DKD):

The time required for DAkkS calibration is shown in days in the pictogram



Factory calibration (ISO):

The time required for Factory calibration is shown in days in the pictogram



Package shipment:

The time required for internal shipping preparations is shown in days in the pictogram



Pallet shipment:

The time required for internal shipping preparations is shown in days in the pictogram

KERN - Precision is our business

To ensure the high precision of your balance KERN offers you the the appropriate test weight in the international OIML error limit classes E1-M3 from 1 mg - 2500 kg. In combination with a DAkkS calibration certificate the best pre-requisite for proper

The KERN DAkkS calibration laboratory today is one of the most modern and best-equipped DAkkS calibration laboratories for balances, test weights and force-measure-

Thanks to the high level of automation, we can carry out DAkkS calibration of balances, test weights and force-measuring devices 24 hours a day, 7 days a week.

. . .

- DAkkS calibration of balances with a maximum load of up to 50 t
- DAkkS calibration of weights in the range of 1 mg 2500 kg
- Volume determination and measuring of magnetic susceptibility (magnetic characteristics) for test weights
 Database supported management of checking equipment and reminder service
- Calibration of force-measuring devices
 DAkkS calibration certificates in the following languages DE, EN, FR, IT, ES, NL, PL
- Conformity evaluation and reverification of balances and test weights

Your KERN specialist dealer:







^{*}The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KERN & SOHN GmbH is under license. Other trademarks and trade names are those of their respective owners.