



product manual

HM-4187H

HM-4187_MAN_10.12



De-Airing Tank

Introduction:

The Humboldt HM-4187H De-Airing Tank is designed to remove dissolved gasses from ordinary tap water. The De-Airing tank requires a source for vacuum and tap water. The apparatus consists of a closed cylinder with hose attachments for use. The HM-4187H can be used in conjunction with any of the distribution panels, as well as the Flex panels.

Installation:

Using 1/4 inch O/D tubing, attach a vacuum line to the connector at the top of the tank by pushing the line into the connector until it is fully seated. Using the same size tubing, connect a line from the "Tap Water Out" connector at the back of the distribution panel to one of the connectors at the back of the tank base. Connect another line from the "De-Aired Water In" line at the back of the distribution panel to the other tubing connector at the back of the tank base.

Operation:

After all of the connections are made, fill the tank to approximately $\frac{3}{4}$ full with tap water. Turn on the vacuum by rotating the knob on the front of the distribution panel or Flex panel. On the distribution panel or the Flex panel, there are two valves for use with the de-airing tank. One valve controls the filling and draining of tap water into and out of the tank and the other controls the vacuum or pressure to the tank. The draining and pressurizing operation is for the purpose of cleaning the tank and not for test purposes. During a test, the de-aerated water from the tank would be controlled by another valve on the distribution panel where the water connection to the base of the triaxial cell is located. Do not fill the tank with tap water while de-aerated water is being used as this would allow tap water to mix with the de-aerated water in the sample. Also, do not fill the tank while using the vacuum as accidental overfilling of the tank would allow water to be drawn into the vacuum lines and possibly into the vacuum pump.

2

Vacuum Line



Tap Water Line

De-Aired Water Line

TURN KNOB LEFT
TO FILL DE-AIRING
TANK WITH TAP WATER
OR
TURN KNOB RIGHT TO
DRAIN DE-AIRING TANK

TURN KNOB LEFT TO
APPLY VACUUM TO
DE-AIRING TANK
OR
TURN KNOB RIGHT TO
APPLY PRESSURE TO
ASSIST DRAINING
OF DE-AIRING TANK

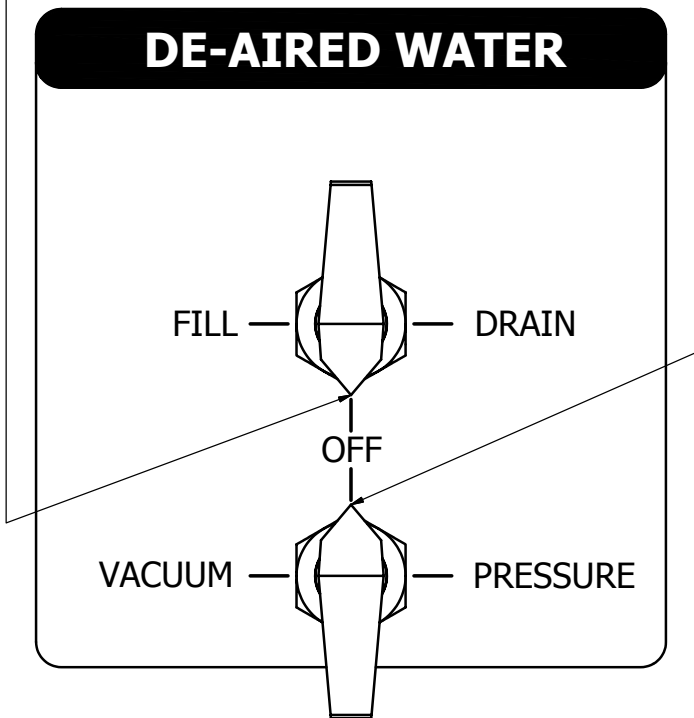


FIGURE 2
DE-AIRING TANK CONTROL VALVES

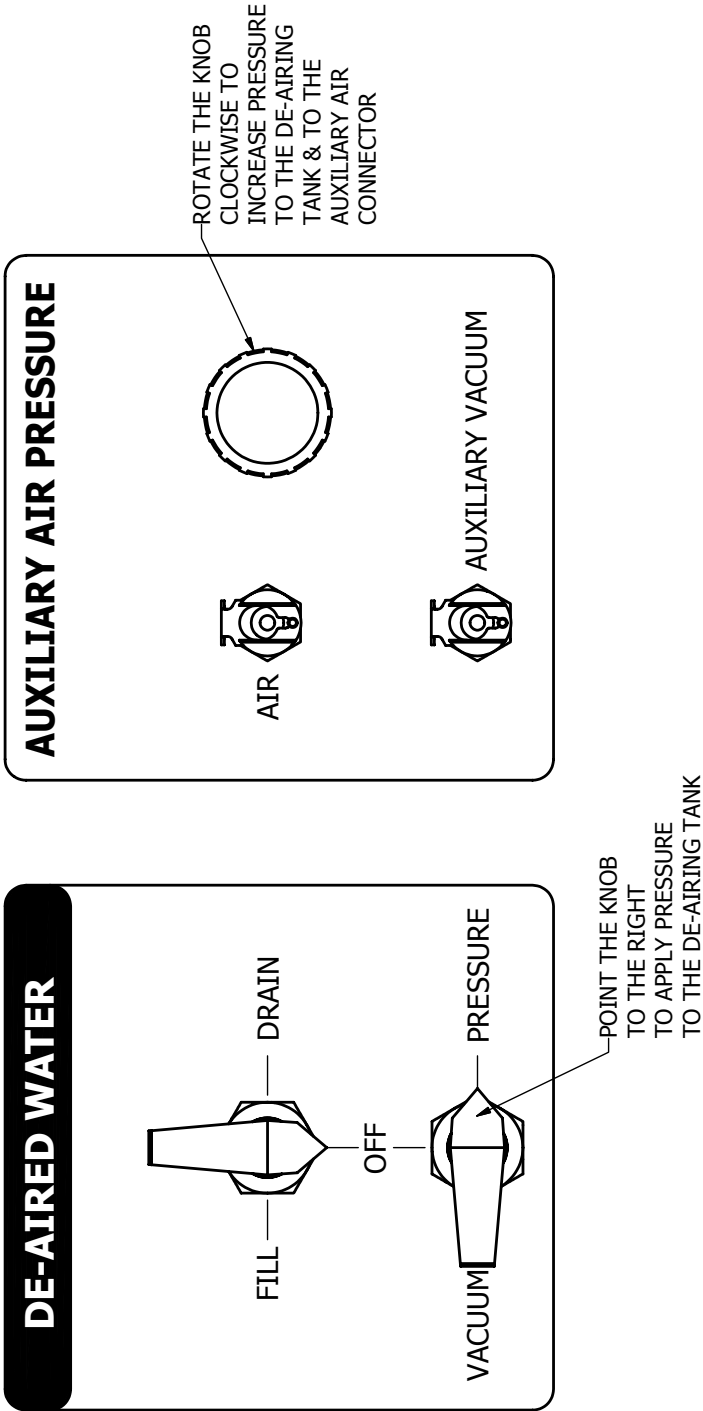


FIGURE 3
REGULATING AUXILIARY AIR PRESSURE